

# *How To Check The Oil In Your Generator*

## *Generac 8KW to 20KW*



1.) Open the generator housing by lifting the top cover up and slightly to the back of the unit.

2.) Turn off the large 60 or 100 amp double breaker (looks like a house breaker), which is located on the side of the generator, directly behind the access panel.

This will disconnect the power to the home.



3.) Locate the controller inside the generator and move the rocker switch to "RESET" or "OFF" (or press the OFF button depending on the type of controller). This will shut down the generator engine.



4.) Locate the dipstick and check the oil level.

5.) If oil is needed, unscrew the oil fill cover.



6.) Add oil in small increments (you don't want to overfill your generator) and fill it to the "FULL" mark on the dipstick as needed. (*Oil type: 5W30 Synthetic*)

7.) Securely fasten the dipstick and the oil cover back on the generator.

8.) On the controller, reset the rocker switch to "AUTO" (or press the AUTO button depending on the type of controller) - this will start the generator.

9.) Wait 10 seconds and turn on the breaker, this will reconnect the home to the generator power.

10.) Close the generator housing.

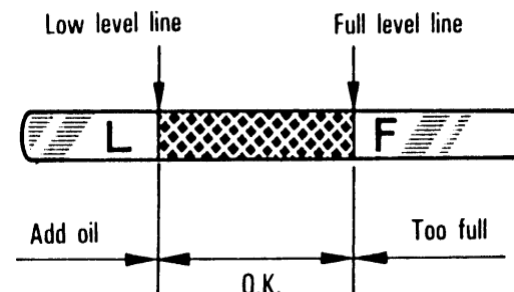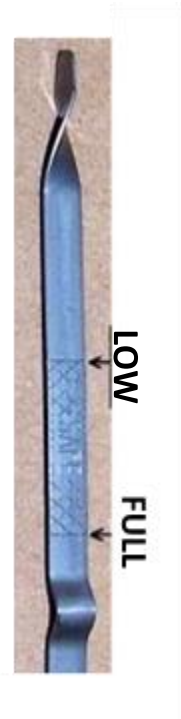

***Please don't hesitate to call the office with any questions  
781-294-8300 or 508-362-8304***