Caution-Warnings & Instructions / Precauciones e Instrucciones (llame para instrucciones en espanol)

To Reduce Risk of Severe Injury or Death to Persons:

- 1) READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE OPERATING YOUR GARAGE DOOR. Failure to do so may cause serious injury or death. In addition Central Valley Overhead Door Inc. will not be responsible for injury caused by improper use, operation or maintenance of the garage door or failure to follow these warnings and instructions.
- 2) Do not tamper or attempt to adjust your garage door. Do not tamper, remove or attempt to adjust the springs, spring brackets, bottom brackets or cables, they are under extreme tension.
- 3) Operate door only when in full view and free from obstruction. When operating your door manually hold onto the door during travel until it comes to a complete stop. This is to keep the cable from jumping off spool and the door from jumping out of its tracks. Failure to do so may result in damage to door or property the door is closed on and will not be covered by your warranty.
- 4) Do not allow children to play with or around the garage door or controls. Keep fingers and hands away from pinch points between sections, tracks, springs and cables.
- 5) Each month manually check your door for smooth operation and door balance. (Begin testing with your door in the down position to reduce injury or death.)
- 6) In the interest of safety have your springs replaced by a professional garage door repairman after 7500 uses or every 4 years, or if broken whichever comes first.
- 7) Once each year lubricate your garage door springs, hinges, tracks and rollers using a garage door lube. Do not use a damaged or broken garage door. If your door requires adjustment or repairs always call a professional garage door repairman.
- 8) When installing an electric garage door opener, read and follow all instructions in the garage door opener manual. Operational warranty of your garage door will be void if anyone other than Central Valley Overhead Door, Inc attaches a garage door opener to this garage door thus modifying the original installation.
- 9) Caution should be taken whenever the manual release handle or cord is actuated with the door open. (weak or broken springs will cause the door to fall rapidly, causing severe injury or death) Make sure the garage door path is clear before pulling this handle.
- 10) Keeping the garage door and garage door opener properly tested and adjusted is the responsibility of the homeowner. Improper adjustment may cause your door not to work or become damaged. If you are unable to perform these homeowner adjustments Central Valley Overhead Door, Inc can do them for a fee. These adjustments include alignment of the safety reversing sensor system (one sensor located on each side of the garage door approx. 6" from floor) and adjustments to the limiting and force adjustments located on the motor head. Failure to test and maintain your garage door and garage door opener may result in severe injury or death to persons and or damage to personal property. Failure to follow any of the warnings and/or instructions will result in your warranty being voided.
- 11) If you do not have an owner's manual for your garage door opener, please call us and we will provide one for you at no cost. (in the interest of safety do not operate your door until you have read and understand the garage door opener manual completely) If you have any questions please call and a representative will be happy to help you. <u>Do not remove this label.</u>

Door Model:	Size:	
Installed:	By:	
Serviced:	Bv:	



FRESNO 292-3005 BAKERSFIELD 827-9946

Log onto: CVOD .com FOR WARRANTY REGISTRATION

HOW TO VIDEOS AT CVOD.COM

- •SAFETY TIPS
- •SAFETY BEAM ADJUSTMENT
- •DOOR PRESSURE ADJUSTMENT
- **•DOOR MAINTENANCE**
- •CODING REMOTES & KEYLESS
- •GARAGE DOOR OPENERS