

INSTRUCTION MANUAL

Printed in Canada
© 1994 Digital Security Controls Ltd.
1645 Flint Road, Downsview, Ontario Canada M3J 2J6

29000124 R6
April 21 1994

DSC
Security Products

PC2550

SYSTEM REFERENCE

| Zone | Protected Area | Zone Type |
|-------------|-----------------------|------------------|
| 1 | _____ | _____ |
| 2 | _____ | _____ |
| 3 | _____ | _____ |
| 4 | _____ | _____ |
| 5 | _____ | _____ |
| 6 | _____ | _____ |
| 7 | _____ | _____ |
| 8 | _____ | _____ |

Fire Zone _____

- [F] Key Enabled Disabled
- [A] Key Enabled Disabled
- [P] Key Enabled Disabled

Access Codes

Master Code: _____

- [2] _____ [3] _____ [4] _____ [5] _____
- [6] _____ [7] _____ [8] _____ [9] _____
- [10] _____ [11] _____ [12] _____ [13] _____
- [14] _____ [15] _____ [16] _____

Entry and Exit Times

Entry Delay: _____ seconds Auxiliary Entry Delay: _____ seconds
Exit Delay: _____ seconds Auxiliary Exit Delay: _____ seconds

Monitoring Station Information

Account: _____ Phone: _____

For Service:

Contact: _____ Phone: _____

A WORD ABOUT YOUR SYSTEM

The PC2550 Security System has been designed to give you the greatest possible flexibility and convenience. Read this manual carefully and become familiar with the operation of your Security System. Your installer will tell you which commands listed in this manual apply to your system. Fill out the SYSTEM REFERENCE sheet in this manual and store it in a safe place for future reference. The label provided for the inside of the keypad door can be used to record which sensors are on each zone.

IMPORTANT NOTE

Remember that no security system can prevent emergencies. It is only intended to alert you in case of an emergency and should not take the place of prudent security practices or life and property insurance.

Notes for UL Installations

The PC2550 is suitable for the following UL installations:

- Household Fire and Grade A Burglary
- Grade A Local
- Grade B Central Station
- Grade A Police Station Connect with Basic Line Security
- Grade C Central Station
- Grade A Police Connection with Basic Line Security

It is important to test your system every week. To do this, first inform the monitoring station that you are testing your system. Then, with the system disarmed, activate all detection sensors one at a time and observe the zone light come on at the keypad as each sensor is activated. Perform a bell test by entering [*][6][Master Code][8] with the system disarmed. The PC2550 can be programmed at the time of installation to automatically perform a test transmission to the monitoring station on a regular basis. If the system has not been programmed for this automatic test, call the monitoring station for instructions on how to perform a test transmission. Don't forget to inform the monitoring station when you have finished your test.

Check to see if the "Trouble" light is on when arming the system. See the Trouble Display section in this manual for a description of the different trouble conditions. Contact your installer for assistance if the trouble condition cannot be located and corrected.

HOW YOUR SYSTEM WORKS

Your Security System is made up of a control panel, one or more keypads, and various detectors and sensors. The control panel will be mounted out of the way in a utility room or basement. The metal cabinet contains the system electronics, fuses and stand-by battery. There is normally no reason for anyone but the installer to have access to the control panel. The keypad(s) have an audible indicator, display lights and command entry keys. The keypad is used to send commands to the system and to display the current system status. Keypads are mounted in convenient areas close to the exit-entry doors. The security system has up to eight zones or areas of protection. Each zone used will have connected to it various sensors, such as door or window contacts, motion detectors, glassbreak detectors and vibration or shock sensors. When a sensor is in alarm, a keypad light will be on to indicate which zone is in alarm.

MASTER CODE

The 4 digit Master Code is used for arming and disarming the system, for programming additional access codes, and for changing other features. The Master Code will be supplied to you by your installer. All keypad entries are made by pressing one key at a time and may be changed by you at any time if the installer selects an option. For additional access codes, see Programming Additional Access Codes.

ARMING

Close all protected doors and windows and stop movement in areas covered by motion detectors. If the "Bypass" light is ON, be sure zones are being intentionally bypassed before arming the system (see Zone Bypassing).

Check to see that the "Ready" light is ON (all zones are closed). The system cannot be armed unless the "Ready" light is ON. Enter a [4 digit access code]. As each digit is entered, the keypad sounder will beep. Once the correct access code is entered, the "Armed" light will come ON and the keypad sounder will beep quickly. If the access code was entered incorrectly or the "Ready" light was not ON, the keypad sounder will beep steadily for 2 seconds.

When the correct code is entered and the system is armed, exit through the door indicated by your installer as the exit-entry door. The exit time may be changed by your installer (please refer to the Quick-Arm feature).

Arming and Commercial Installations

When an Access Code is entered to arm the system, the bell or siren will sound a short tone to indicate that the system is being armed. If your security system is programmed to report to a monitoring station, the keypad will also sound a tone to indicate that the monitoring station has been advised of the arming of the system.

If the system is being armed and the bell or siren fails to sound, or if the keypad does not sound a tone to acknowledge that the monitoring station has been advised of the arming, arrange for service for the system.

AUTO-BYPASS OPTION - HOME-AWAY ARMING

This feature, if selected by your installer, will allow you to arm your system with any valid access code and the system will automatically bypass the interior zones if those interior zones have been designated as home-away zones by the installer. When activated, the "Bypass" light will come ON. If you exit within the allowed exit time, the system will automatically reactivate the interior zones. This feature is designed to save the user from having to manually bypass interior zones each time they wish to arm the system and remain at home.

In residential applications where the system has been armed and the interior zones are automatically bypassed, the interior zones can be reactivated from a keypad outside the interior zones protection area (e.g. a bedroom). To reactivate the interior zones, press [*] then [1] and the "Bypass" light will go out.

ENTRY DELAY OFF ARMING

If you wish to arm your system and eliminate the entry delay, enter [*][9] before your access code. The "Armed" light will flash as a reminder that the system is armed and has no entry delay. An entry through any zone programmed as a delay zone will create an instant alarm.

e.g. To arm without entry delay.....Press [*][9][Access Code]

DISARMING

Enter the premises only through the door indicated by your installer as the entry/exit door. The keypad sounder will be ON. Go to the keypad and enter the [4 digit access code]. If an error is made entering the code, press the [#] key and enter the code again. The "Armed" light will go out and the keypad sounder will stop. A correct access code must be entered before the allowed entry time expires. The entry delay time may be changed by the installer.

If an alarm occurred while the panel was armed, the "Memory" light and the light for the zone which caused the alarm will start to flash and will continue flashing for 2 minutes. At the end of 2 minutes, the keypad lights will stop flashing and the keypad will return to the normal Ready condition.

If you return home and find an alarm has occurred while you were away, it is possible that an intruder may still be on the premises. Go to a neighbour's and if your system is monitored, call the monitoring station. They will advise what action has been taken as a result of the alarm and whether the premises are safe to enter. If your system is not monitored, call the local police to investigate.

ALARM MEMORY DISPLAY

If the "Memory" light is on, an alarm has occurred since the last time the panel was armed. The alarm memory will automatically be displayed when the system is disarmed (see Disarming).

Press the [*] then [3] keys to display which zone caused the alarm.

The alarm memory will be cleared when the panel is re-armed.

Press the [#] key to return to Ready.

ZONE BYPASSING

Bypassed zones do not cause an alarm. Use zone bypassing when access is needed to part of the protected area. Also, damaged wiring or contacts on a zone may be temporarily bypassed until repairs can be made so that the panel can be armed.

To bypass zones, enter [*][1][Access Code] and the zone numbers to be bypassed. i.e. [1] for zone 1, [8] for zone 8. If the [0] key is pressed instead of a zone number, all zone bypasses will be removed. If the [9] key is pressed, the last group of zones which was bypassed will be recalled. Press [#] to return to Ready.

For security reasons, your installer may prevent the bypass command from operating on certain zones.

The "Bypass" light is ON as long as at least ONE zone is bypassed. Do not unintentionally bypass zones when arming. Zone bypasses are automatically cancelled each time the panel is disarmed and must be re-applied before the next arming.

TROUBLE DISPLAY

The PC2550 continuously monitors a number of possible trouble conditions. If one of these conditions occurs, the keypad sounder will beep quickly twice every 10 seconds and the keypad "Trouble" indicator will light. Pressing any key on the keypad will silence the beeper but the "Trouble" light will remain on until the trouble condition is cleared. If you cannot determine the cause of the trouble condition, call your installer for assistance. Press the [*] then [2] keys to display the type of trouble. The zone lights indicate the type of trouble condition.

| ZONE LIGHT | TROUBLE |
|------------|--|
| 1 | Defective Stand-by Battery |
| 2 | AC Power Failure (see Note below) |
| 3 | Day Circuit Trouble |
| 4 | Telephone Line Problem |
| 5 | Unsuccessful Communication Attempt with Monitoring Station |
| 6 | Bell Circuit Failure |
| 7 | Smoke Detector Circuit Trouble |
| 8 | Loss of Time on System Clock |

Press the [#] key to return to Ready.

Note: The keypad buzzer will not sound for AC failure until there is also a low battery condition. The "Trouble" light will come ON as soon as AC fails and will remain on until AC restores.

SMOKE DETECTOR AND FIRE ALARM RESET

If the Fire Alarm sounds at night, do not investigate the alarm: follow your evacuation plan immediately. Go to a neighbor and call the fire department.

When a Fire Alarm is generated, the bell or siren will sound with a pulsing tone. Transmission of the fire alarm to your monitoring station is delayed for 30 seconds to allow you to cancel possible false alarms. To silence the alarm, press the [#] Key. When the [#] Key is pressed, the system will delay transmission of the fire alarm for an additional 90 seconds. The 90-second delay is intended to allow you to reset the smoke detectors after a false alarm.


If the smoke detector is reset and remains reset after the 90-second delay, a fire alarm will not be transmitted to the monitoring station.

If the smoke detector is reset but goes into alarm again after the 90-second delay, the fire alarm will sound again and the process described above will repeat. A fire alarm will be transmitted to your monitoring station after 30 seconds if it is not silenced by pressing the [#] Key.

Smoke detectors installed on your system may be reset after a false alarm using the [*][4] command. To reset smoke detectors to normal, first clear all products of combustion from the detectors. Press [*] then hold down the [4] key for several seconds. If the detectors are clear of smoke, they will return to normal. If the detectors still have smoke in them, the alarm will sound again. If the alarm sounds again, first ensure that there is no threat of fire; you may then silence the alarm and reset the smoke detectors.

An immediate fire alarm signal and transmission may be generated by holding down the [F] key for 2 seconds.

IMPORTANT
Test system weekly, have system trouble conditions corrected by installer.

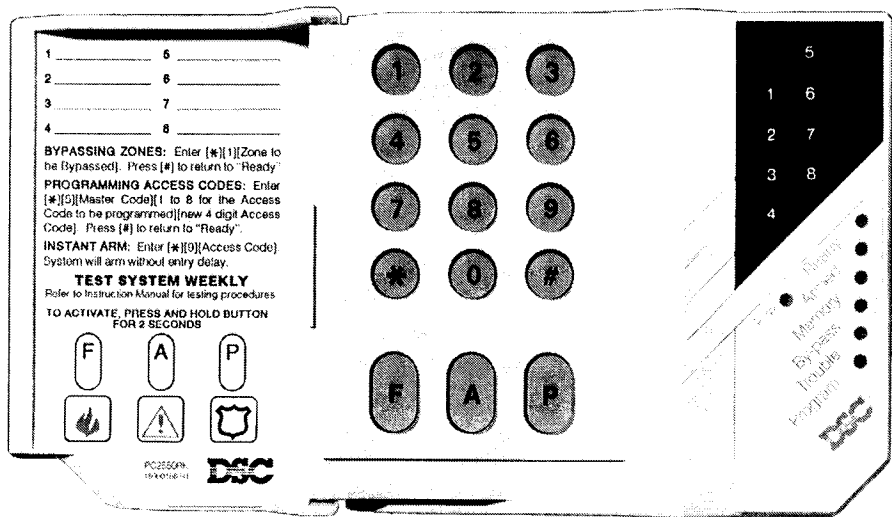

PRESS **[F]** for 2 seconds to activate FIRE transmission.

PRESS **[A]** for 2 seconds to activate an AUXILIARY transmission.

PRESS **[P]** for 2 seconds to activate PANIC transmission.

THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY INSTALLER. COLORED LABELS ON KEYPAD DOOR INDICATE WHICH KEYS ARE ACTIVE.

Zone Lights, when ON in the normal operating mode, indicate an open zone. eg. open door, window, etc. Refer to zone chart on keypad door for zone information.

Fire light is ON when a detector on the fire loop is in alarm. Press any key within 30 seconds of first alarm to get 2 minutes to reset smoke detectors.

Ready light ON: system ready for arming.

Ready light OFF: open zone; must be closed or bypassed before arming.

Ready, Armed and Program lights flashing indicates user code 9-16 programming.

Armed light will come ON indicating system armed. Ensure "Ready" light is ON, enter [4 digit] access code to arm panel.

Armed, Ready and Program lights flashing indicates user code 9-16 programming.

Memory light ON means an alarm has occurred. To display zone that caused alarm, press [*] then [3]. Zone light will come on indicating which zone caused the alarm.

Bypass light comes ON when you bypass a zone. To bypass a zone, press [*], [1], [Access Code] and then the zone(s) you wish to Bypass. Enter 1 for zone 1....8 for zone 8. Press [#] to return to ready.

Trouble light ON means there is a fault on the system. Press any key to silence keypad beeping. Press [*] then [2] to display type of trouble.

| Zone Light | Trouble |
|-------------------|------------------------|
| 1 | Battery |
| 2 | A.C. Power |
| 3 | Day loop |
| 4 | Telephone line |
| 5 | Communicator |
| 6 | Bell circuit |
| 7 | Smoke detector circuit |
| 8 | Clock needs resetting |

Program light flashes when programming user codes 1 to 8. Press [*][5], then enter [Master Code]. Select a code by pressing a key from 1 to 8 and enter the [4 digit] code. Press [9] to enter codes 9 to 16. "Ready", "Armed" and "Program" lights will flash. Press [#] to return to ready mode.

Press [#].....

- when an error is made in entering code, then enter code again.
- to return to ready state after using [*] commands.

PROGRAMMING ADDITIONAL ACCESS CODES

Up to 15 access codes in addition to the Master Code can be entered from the keypad.

Enter [*][5][Master Code]. The "Program" light will flash and the zone lights will show which of codes 1 to 8 have already been programmed. To enter a new code or change an existing code, first press the code number (1 to 8) and then enter your [4 digit] code. To erase a code, press [****] instead of a [4 digit] code. Note that the [*] and [#] keys cannot be used in a code.

For codes 9 to 16, after entering [*][5][Master Code], press [9]. The "Ready", "Armed" and "Program" lights will flash and the zone lights 1 to 8 will indicate which of codes 9 to 16 have been entered. As above, to change or enter a code, select the code by pressing 1 to 8 and then enter your [4 digit] code. Entering [****] erases a code. Pressing [9] again will change back to codes 1 to 8.

Pressing [#] returns you to ready mode. Access Code 16 ([*][5][Master Code][9][8][4 digits]) can be set up by your installer to be used by a maid or other service personnel one time only. Each time you enter this code, it can be used to disarm your system but is erased when used to arm the system, ensuring just one-time access.

QUICK-ARM FEATURE

When the Quick-Arm feature is enabled, the panel may be armed simply by entering [*][0] instead of a 4 digit code. The [*][0] command will not disarm the panel.

Enter [*][6][Master Code][4] to turn ON and OFF the Quick-Arm feature. When the command is entered, the keypad will beep 3 times if the feature is being enabled and will sound one long beep if the feature is being disabled.

Press [#] to return to Ready.

QUICK EXIT OPTION

This feature, if selected by your installer, allows one exit with the system armed without affecting its current armed status.

Pressing [*][0] gives you 2 minutes to exit if you have already armed the system. This is useful if you want to exit while preserving the protection for someone left on the premises. Once you have exited, the system will be armed as before. If the zone is open after 2 minutes or there has been more than one exit, the pre-alert will sound.

DOOR CHIME FEATURE

The door chime feature is used, while the panel is disarmed, to provide a tone from the keypad each time a door or window is opened or closed. The doors and windows which will provide this indication are programmed by your installer.

Enter [*][6][Master Code][6] to turn the door chime feature ON and OFF. When the command is entered, the keypad will beep 3 times if the feature is being enabled and will sound one long beep if the feature is being disabled.

ALARM TEST

Enter [*][6][Master Code][8] for a 2 second test of the keypad lights, keypad sounder and alarm bells.

ENTERING ACCESS CODES SUMMARY:

[*][5][Master Code]...

[1 to 8] [4 digits] Programs first group of 8 codes

[9] [1 to 8] [4 digits] Programs second group of 8 codes

[9] Returns to first group of 8 codes

[#] exits to the Ready mode

USER FUNCTIONS COMMAND SUMMARY:

[*][6][Master Code]...

[4] Quick-Arm Enable/Disable

[6] Door Chime Enable/Disable

[8] Bell Test Function

KEYPAD ZONES

There are three zones which can be activated from the keypad. These zones may or may not be active on your keypads depending on how your installer has programmed them.

[F] Key: Keypad FIRE zone. Pressing this key for 2 seconds will activate the keypad fire zone and the bell/siren output will pulse ON and OFF. This zone is annunciated by the "Fire" light on the keypad.

[A] Key: Keypad AUXILIARY zone. Pressing this key for 2 seconds will produce a series of beeps on the keypad along with the transmission. To confirm transmission, the keypad sounder will beep 6 times.

[P] Key: Keypad PANIC zone. Depending on how your installer programs the panel, pressing this key for 2 seconds may produce a completely silent alarm or an audible alarm along with the transmission. If programmed as audible, the alarm bell will ring.

MAINTENANCE

With normal use, the system requires minimum maintenance. The following should be observed:

1. Do not wash the keypad with a wet cloth. Light dusting with a barely damp cloth should remove normal accumulations of dust.
2. The battery/bell test is designed to determine battery condition, however it is recommended that the stand-by battery be replaced every three years.
3. For other system devices such as smoke detectors, passive infrared, ultrasonic or microwave motion detectors or glassbreak detectors, consult the respective manufacturer's literature for testing and maintenance.

TESTING

IT IS RECOMMENDED THAT THE SYSTEM BE TESTED ON A WEEKLY BASIS

Note: Perform such activities in the off-peak hours, such as early morning or late evening.

1. Inform the monitoring station that you are testing your system.
2. Disarm the system ("Ready" light should be ON).
3. Perform a battery/bell test by pressing [*][6][Master Code][8]. The alarm will sound for about 2 seconds. If a trouble occurs after the test, press [*][2] to view the trouble condition.
4. Activate each sensor in turn. For example, open a door or window. Observe the zone light come ON as each sensor is activated. The zone light will go OFF as each sensor is restored to normal (door or window is closed).
5. Press the [F] key. The signal will sound in a pulsed mode. Arm then disarm the panel to silence the signal. Repeat this test by pressing the [A] key and the [P] key in turn. Remember, the [A] key does not ring the bell and the [P] key may not be programmed for an audible signal.
6. If the fire zone is used, activation will cause the signal to sound in a pulsed mode.

CAUTION: Do not use open flame or burning materials to test a smoke detector. Contact your installer for information on safe methods to activate a smoke detector.

7. Should your system fail to operate properly, call your installer for service.
8. When testing is complete, call and advise the monitoring station.

FIRE SAFETY IN THE HOME

Most fires occur in the home and to minimize this danger it is recommended that a household fire safety audit be conducted and a family escape plan be developed.

HOUSEHOLD FIRE SAFETY AUDIT

1. Are all electrical appliances and outlets in a safe condition? Check for frayed cords, over-loaded lighting circuits, etc. If you are uncertain about the condition of your electrical appliances or household service, have a professional evaluation.
2. Are all flammable liquids stored safely in closed containers in a well ventilated cool area? Cleaning with flammable liquids should be avoided.
3. Are fire hazardous materials (matches) well out of reach of children?
4. Are furnaces and wood burning appliances properly installed, clean and in good working order? Have a professional evaluation.

FAMILY ESCAPE PLANNING

There is often very little time between the detection of a fire and the time it becomes deadly. It is thus very important that a family escape plan be developed and rehearsed.

1. Every family member should participate in developing the escape plan.
2. Study the possible escape routes from each location within the house and since many fires occur at night, special attention should be given to the escape routes from sleeping quarters.
3. It is essential that escape from a bedroom be possible without opening the interior door. Consider the following when making your escape plans:
 - Make sure that doors and windows that open to the outside are easily opened. Ensure that they are not painted shut, and that their locking mechanisms operate smoothly.
 - If opening the exit or using the exit is too difficult for children, the elderly or handicapped, plans for rescue should be developed. This includes making sure that those who are to perform the rescue can promptly hear the fire warning signal.
 - If the exit is above the ground level, an approved fire ladder or rope should be provided as well as training in its use.
 - Exits on the ground level should be kept clear. Be sure to remove snow from exterior patio doors in winter; outdoor furniture or equipment should not block exits.
 - The family should have a predetermined assembly point where everyone can be accounted for; for example, across the street or at a neighbour's house.
 - Once everyone is out of the house, call the Fire Department.
 - A good plan emphasizes quick escape. Do not investigate first or attempt to fight the fire, and do not attempt to rescue belongings or pets as this takes up valuable time. Once outside, do not re-enter the house. Wait for the fire department.
 - Write the plan down and rehearse frequently, so that should an emergency arise, everyone will know what they are to do. Revise the plan as conditions change; for example, when there are more or fewer family members in the home, or if there are changes to the house.
 - Make sure your fire warning system is operational by conducting weekly tests as noted elsewhere in this manual. If you are unsure about system operation, contact your installing dealer.
 - It is recommended that you contact your local fire department and request further information on home fire safety and escape planning. If available, have your local fire prevention officer conduct an in-house fire safety inspection.

LIMITED WARRANTY

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free from defects in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd., such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

WARNING:

Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

FCC COMPLIANCE

CAUTION: Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4

IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC Rules. On the side of this equipment is a label that contains, among other information, the FCC registration number of this equipment.

Notification to Telephone Company

Upon request, the customer shall notify the telephone company of the particular line to which the connection will be made, and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC Registration Number: F534J3-10411-AL-E

Ringer Equivalence Number: 0.0B

USOC Jack: RJ-31X

Telephone Connection Requirements

Except for the telephone company provided ringers, all connections to the telephone network shall be made through standard plugs and telephone company provided jacks, or equivalent, in such a manner as to allow for easy, immediate disconnection of the terminal equipment. Standard jacks shall be so arranged that, if the plug connected thereto is withdrawn, no interference to the operation of the equipment at the customer's premises which remains connected to the telephone network shall occur by reason of such withdrawal. Ensure that plugs and jacks meet the dimension, tolerance and metallic plating requirements of 47 C.F.R. Part 68 Subpart F.

Incidence of Harm

Should terminal equipment or protective circuitry cause harm to the telephone network, the telephone company shall, where practicable, notify the customer that temporary disconnection of service may be required; however, where prior notice is not practicable, the telephone company may temporarily discontinue service if such action is deemed reasonable in the circumstances. In the case of such temporary discontinuance, the telephone company shall promptly notify the customer and will be given the opportunity to correct the situation.

Additional Telephone Company Information

The security control panel must be properly connected to the telephone line with a USOC RJ-31X telephone jack.

The FCC prohibits customer-provided terminal equipment be connected to party lines or to be used in conjunction with coin telephone service. Inter-connect rules may vary from state to state.

Changes in Telephone Company Equipment of Facilities

The telephone company may make changes in its communications facilities, equipment, operations or procedures, where such actions are reasonably required and proper in its business. Should any such changes render the customer's terminal equipment incompatible with the telephone company facilities the customer shall be given adequate notice to the effect modifications to maintain uninterrupted service.

Ringer Equivalence Number (REN)

The REN is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company.

Equipment Maintenance Facility

If you experience trouble with this telephone equipment, please contact the facility indicated below for information on obtaining service or repairs. Do not return equipment to this address without prior authorization. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Digital Security Controls Ltd.

160 Washburn Street
Lockport, NY 14094